LCD Manual instruction (v2 > 01/08/2015)



Setting Up

Long Press both  +  simultaneously
(Same to save and exit setup)

Display will now show PO1, and then to PO8 in sequence

P01 Set outside tyre diameter to nearest 0.5"
Note because this is not precise and your readout will be only be as accurate as nearest 0.5" is to actual diameter.
Your 26" or 28" bike may actually be 0.5 more or less...check it.
P02 :Number of magnetic steel (**is 46 for motor rh205c power E-bike**)
P03 Screen Brightness set 1 to 3 increasing brightness
P04 Choose Km or Mile
P05 Choose Voltage 36V or 46V or 60V
P06 Set time for turning off if not used
P07 Set speed kmh or mph (%) 100 = Work at 100% Capacity
P08 Hall speed : **0** from King Meter Speed Sensor **or 2 from motor rh205c power E-bike**

Control Buttons

All buttons work with either long press or short press
And short and long presses have different functions

 Long – on/off screen
Short – change multi-function screen

pour éteindre
1 fois long +
1 fois court

 Long – set cruise speed
Short – turn light on, and save setup input


 Long –
Short – less PAS, and – setup adjustment


 Long – change speed display
Short - more PAS, and + setup adjustment

Connecting wires :

Red + , Black –, White send, Green receive, Blue switch,
Yellow light **6V +**
Brown light 6V -



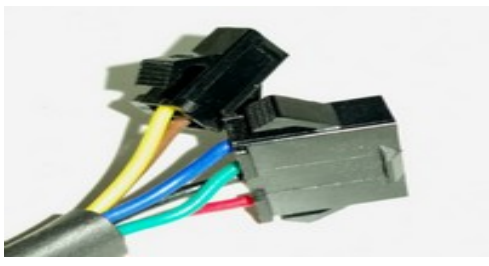

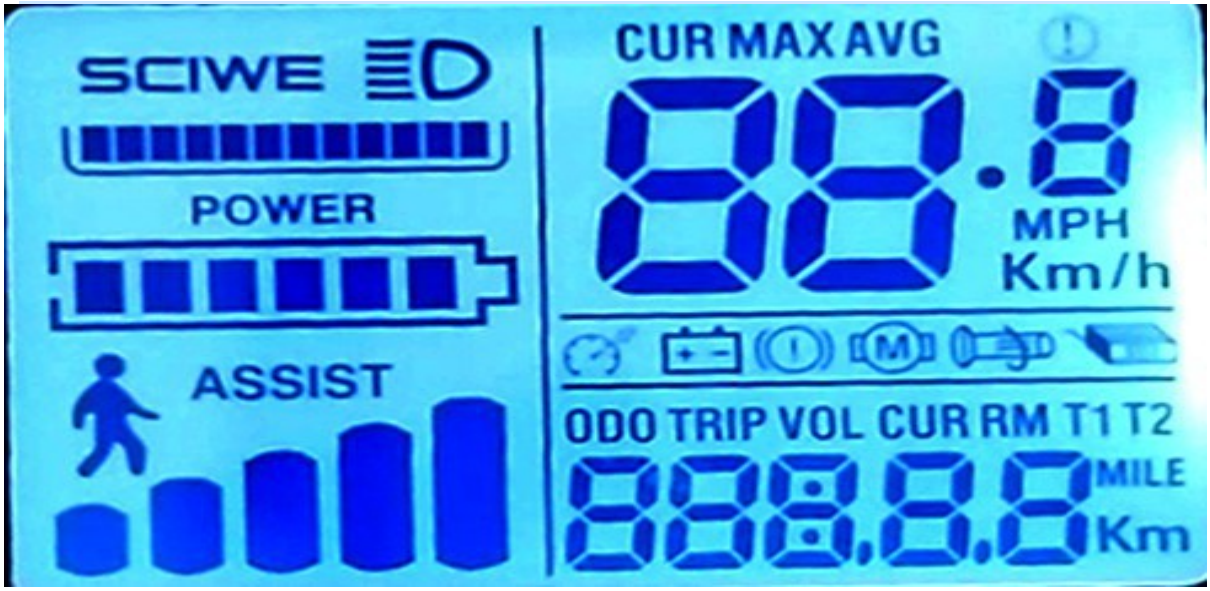

Screen Functions

Light on/off 

Current 

Battery voltage 

Multi-function odometer 

Average and maximum speed 

Failures/warnings 

motor  throttle  controller  brake  low voltage 

PAS level, and cruise speed 



1-5 Level Cruise speed 